
SANSUI TU-555 CONNECTIONS

CAUTION: Never attempt to lay this sheet on the tuner because the heat diffusion effect is largely reduced.

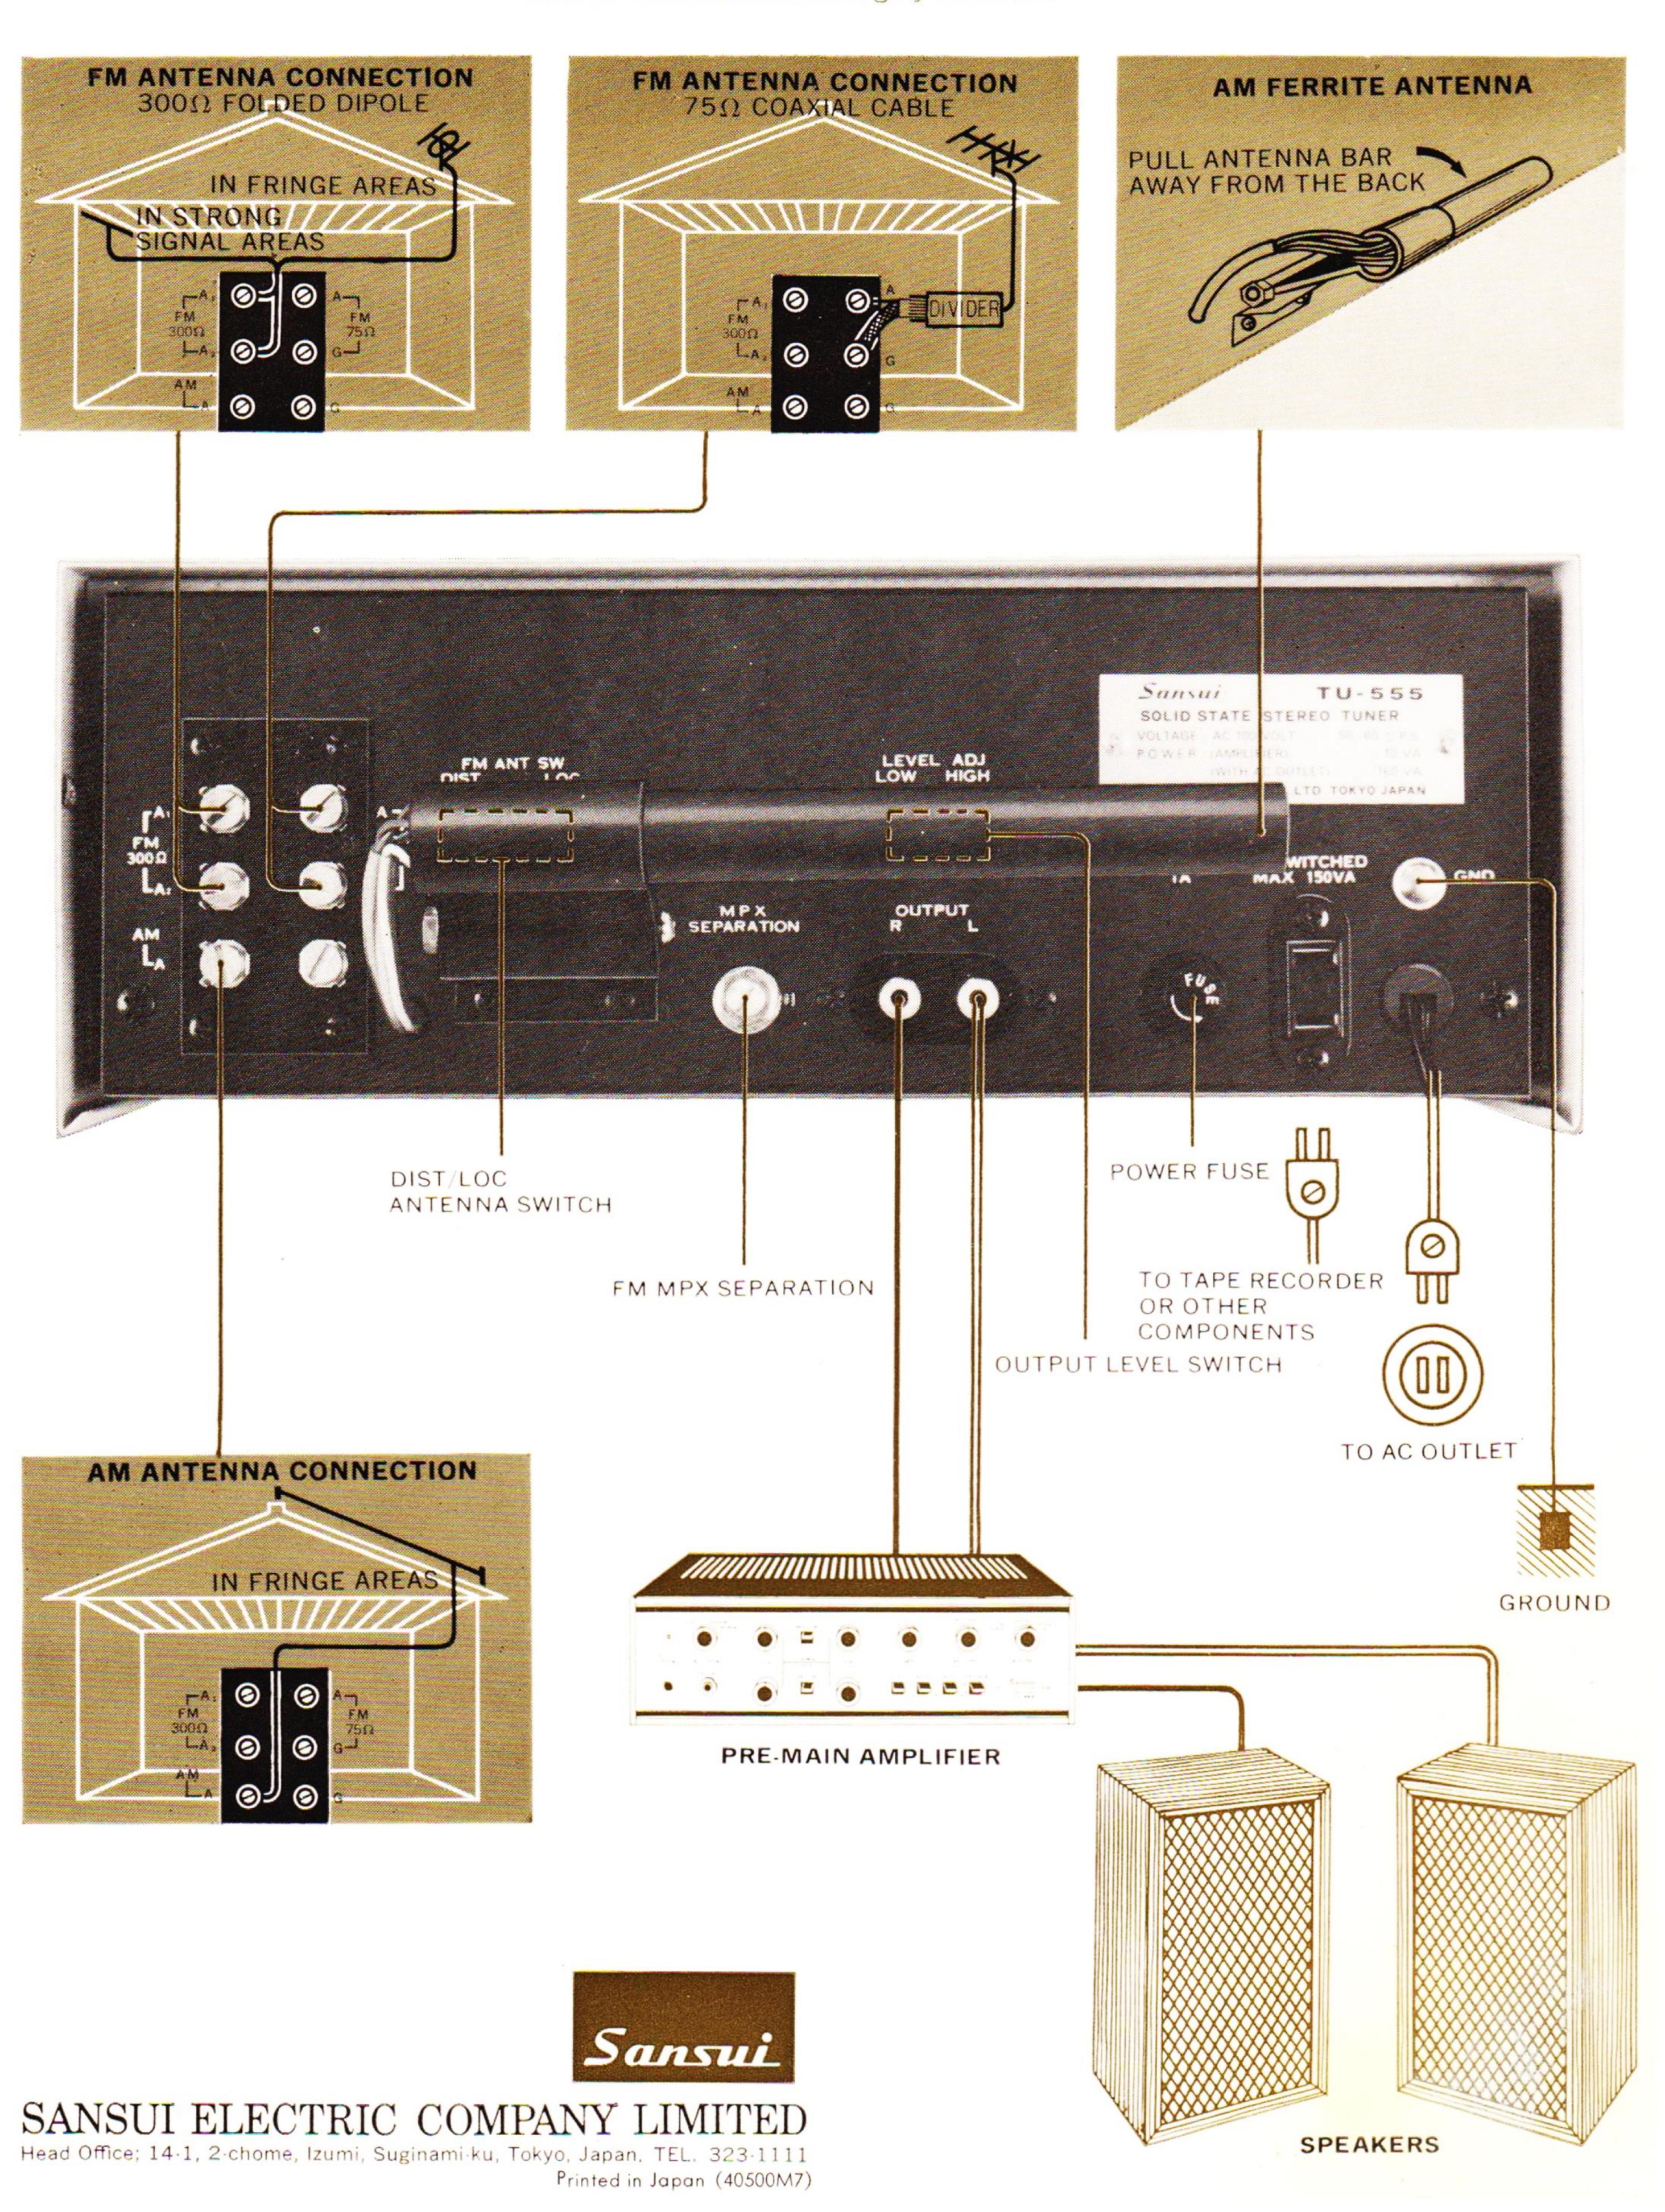


SANSUI TU-555 OPERATIONS

SELECTOR SWITCH

AM—Use this position for all AM programs. **FM MONO**—Use this position for all FM monophonic programs.

FM AUTO—Use this position for automatic FM stereo/mono switching.

CAUTION: Never attempt to lay this sheet on the tuner because the heat diffusion effect is largely reduced.

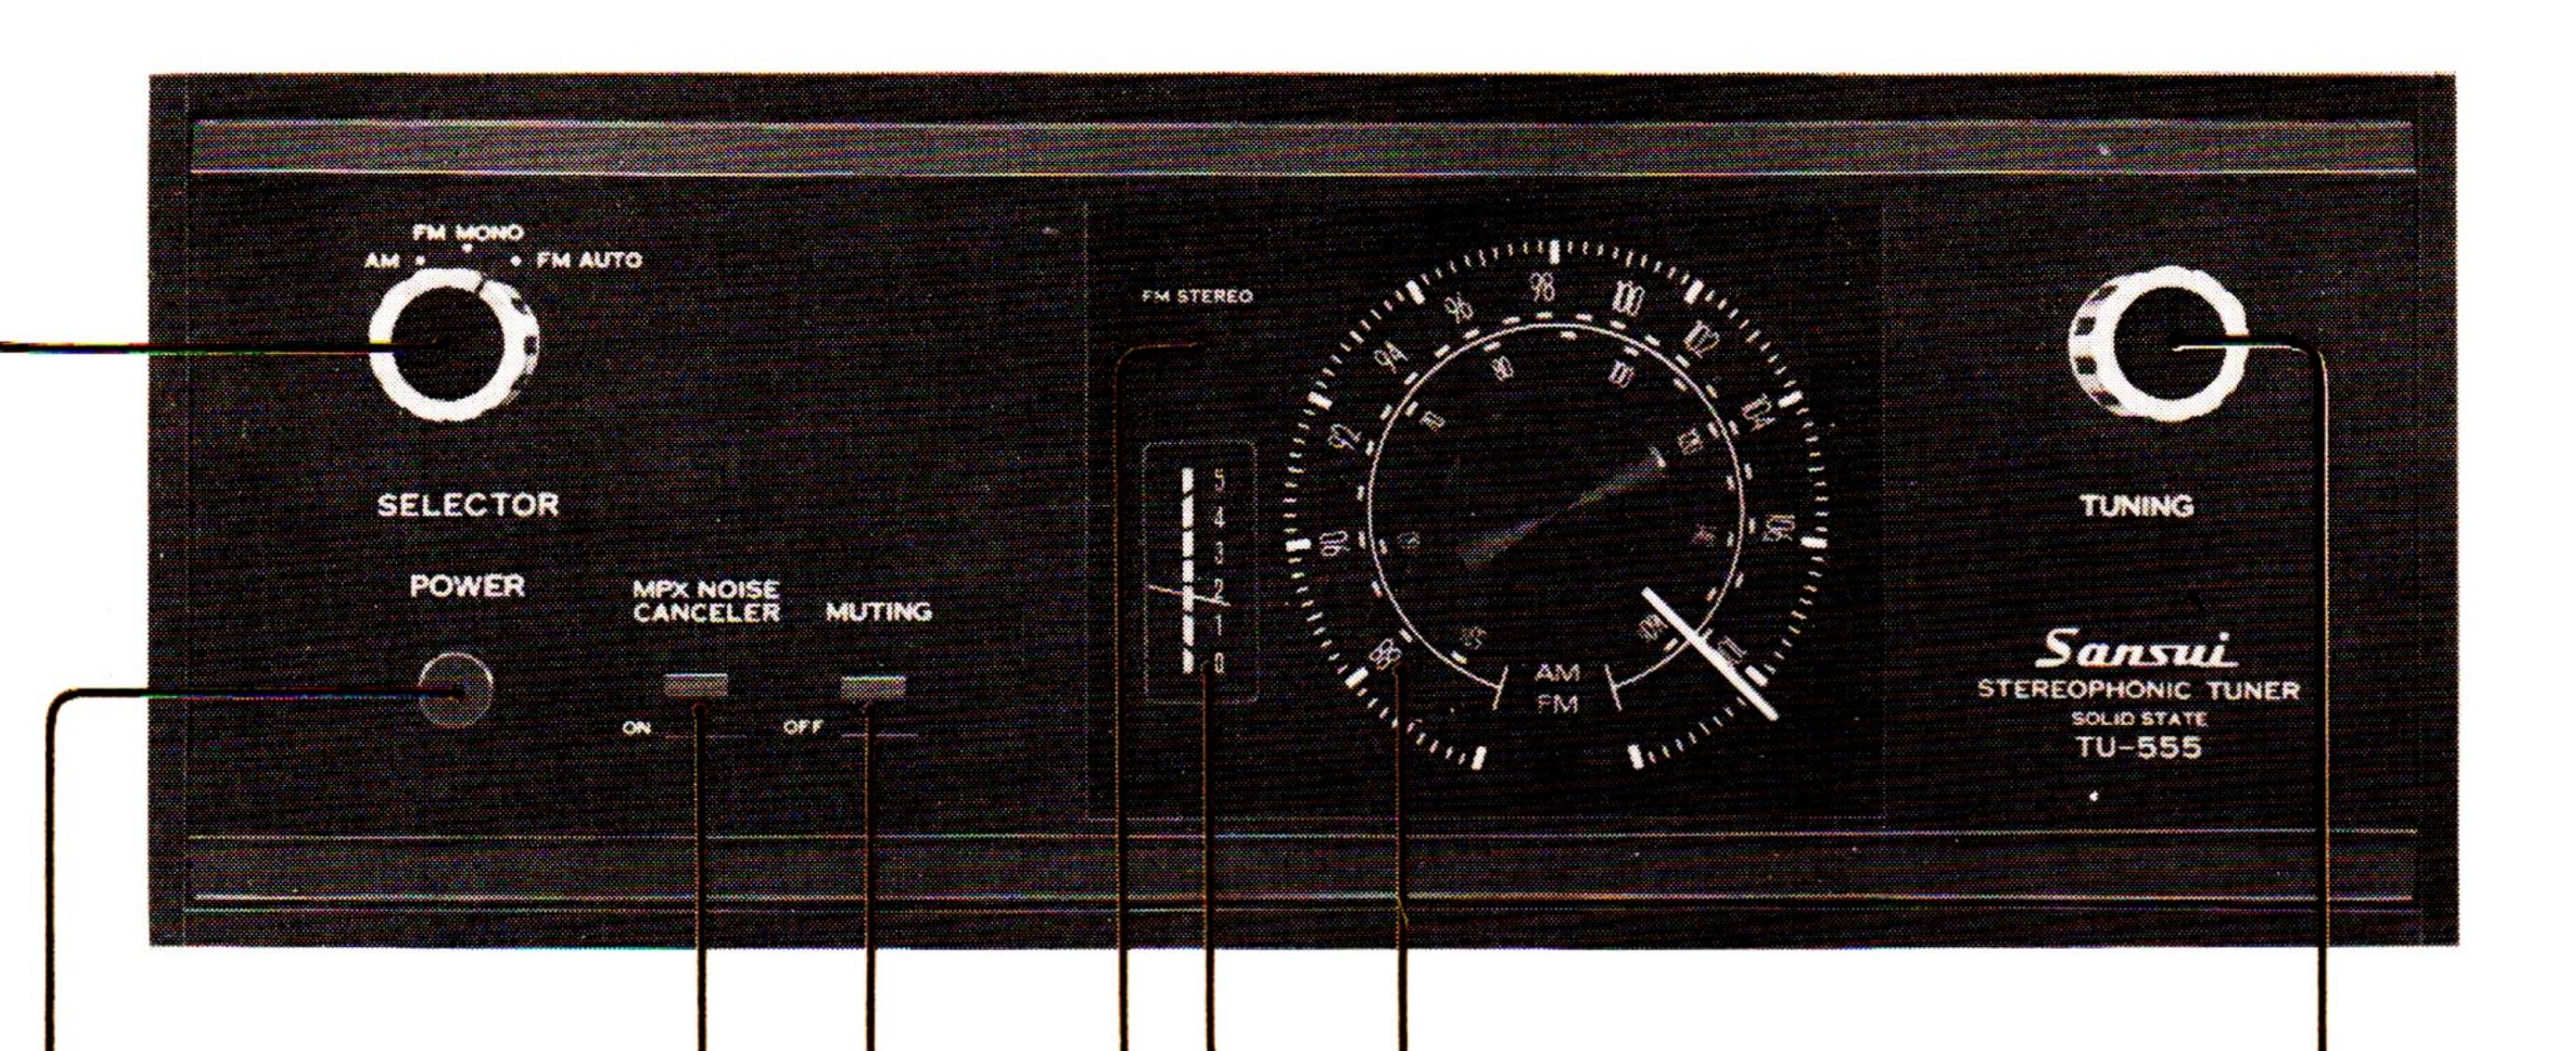

POWER SWITCH

Push this switch to turn the power on; push again to turn the power off.

MPX NOISE CANCELER -

This switch is used to eliminate annoying noise on FM multiplex programs transmitted by distant or weak stations without weakening the treble tones in the music being played. When this switch is on, the TU-555's stereo separation may be slightly reduced. Unless such noise is heard, this switch should not be used.

MUTING

This switch is used to eliminate interstation noise for quiet FM station selection. When this switch is on, weak or distant stations may also be suppressed. To tune weak or distants, stations keep this switch in the OFF position.

TUNING KNOB

Use this knob to select your desired AM or FM station by watching the tuning meter.

DIAL SCALES

The outer dial scale is for FM, the inner for AM.

TUNING METER

This meter aids in pinpointing either AM or FM station; when the needle swings to the maximum upward position (but not necessarily to "5"), the station is correctly tuned.

FM STEREO INDICATOR

The stereo indicator light glows when a stereo program is received or when the dial pointer crosses a station making an FM stereo broadcast. During mono reception, it remains unlit.